

<b>ERROR CODES</b>	<b>DESCRIPTION</b>
<b>01</b>	The coffee grinder is blocked (grinder blades jammed or sensor not reading properly)
<b>03</b>	The brewing unit is blocked in work position (microswitch not released in up position after 3", torque error trying to move down, descent time out exceeded)
<b>04</b>	The brewing unit is blocked in home position (microswitch not released in down position after 3", torque error trying to move up, ascent time out exceeded)
<b>05</b>	Water circuit / flow meter problems (water circuit blocked or no flow meter signal)
<b>10</b>	Boiler temperature sensor short circuited
<b>11</b>	Boiler temperature sensor open circuit
<b>14</b>	The boiler temperature has exceeded the maximum allowed value (165°C)
<b>15</b>	The boiler temperature has not increased by x°C in y sec (boiler power supply disconnected, incorrect boiler fitted must be a 1300W boiler, partial power supply to boiler, cut out thermostat tripped)
<b>19</b>	Mains voltage trouble